

PULSE IN LINE ADAPTOR MATRIX CHART

Connector	N Male	N Female	UHF Male	UHF Female	MPL Male	MPL Female	TNC Male	TNC Female	SMA Male	SMA Female	FME Male	FME Female	BNC Male	BNC Female	QMA Female	4.3-10 Male	4.3-10 Female	7-16 DIN Male	7-16 DIN Female
N Male	N-243			A-03						A-93	A-89			A-07	QMA-10		A43-104		
N Female		N-10	A-04						A-74	A-92			A-06	A-29		A43-102		A-106	
UHF Male		A-04									A-76			A-08					
UHF Female	A-03				A-97		A-18						A-09						
MPL Male				A-97				A-83		A-77		A-87		A-80					
MPL Female														A-84					
TNC Male		A-18								A-78	A-86			A-20					
TNC Female					A-83			TNC-11	A-82	A-85									
SMA Male		A-74						A-82			A-88			A-72					
SMA Female	A-93	A-92			A-77		A-78	A-85				A-81		A-90					
FME Male	A-89		A-76		A-87		A-86		A-88				A-91						
FME Female							A-20			A-81			A-19						
BNC Male		A-06		A-09				A-19			A-91		BNC-51						
BNC Female	A-07	A-29	A-08		A-80	A-84			A-72	A-90				BNC-41					
QMA Male																			
QMA Female	QMA-10																		
4.3-10 Male		A43-102																	A43-101
4.3-10 Female	A43-104																		A43-103
7-16 DIN Male		A-106																A43-103	
7-16 DIN Female																A43-101			716-10

Right Angle Adaptors		Tee Adaptors		Bulkhead Adaptors	
BNC-49	Pulse BNC(M) to BNC(F) Adaptor; Right Angle	BNC-54	Pulse BNC Tee (F/M/F) Adaptor	A43-105	Pulse 4.3-10(F) to 4.3-10(F) Adaptor; Bulkhead
N-246	Pulse N(M) to N(F) Right Angle Adaptor	BNC-80	Pulse BNC Tee (F/F/F) Adaptor	N-46	Pulse N(F) to N(F) Adaptor; Bulkhead
SMA-14	Pulse R/A SMA(M) to SMA(F) Adaptor	BNC-81	Pulse BNC Tee (M/F/F) Adaptor	SMA-10	Pulse SMA(F) to SMA(F) Adaptor; Bulkhead
TNC-15	Pulse R/A TNC(M) to TNC(F) Adaptor	N-48	Pulse N Tee (F/F/F) Adaptor	SMA-12	Pulse SMA(F) to SMA(F) Adaptor; Bulkhead Hex Fitting
		N-49	Pulse N Tee (F/F/M) Adaptor	UHF-15	Pulse UHF(F) to UHF(F) Adaptor; Bulkhead
		UHF-32	Pulse UHF Tee (F/F/M) Adaptor		